


Assembly Instructions:

ASSEMBLAGE OF THE BARBEQUE UNIT

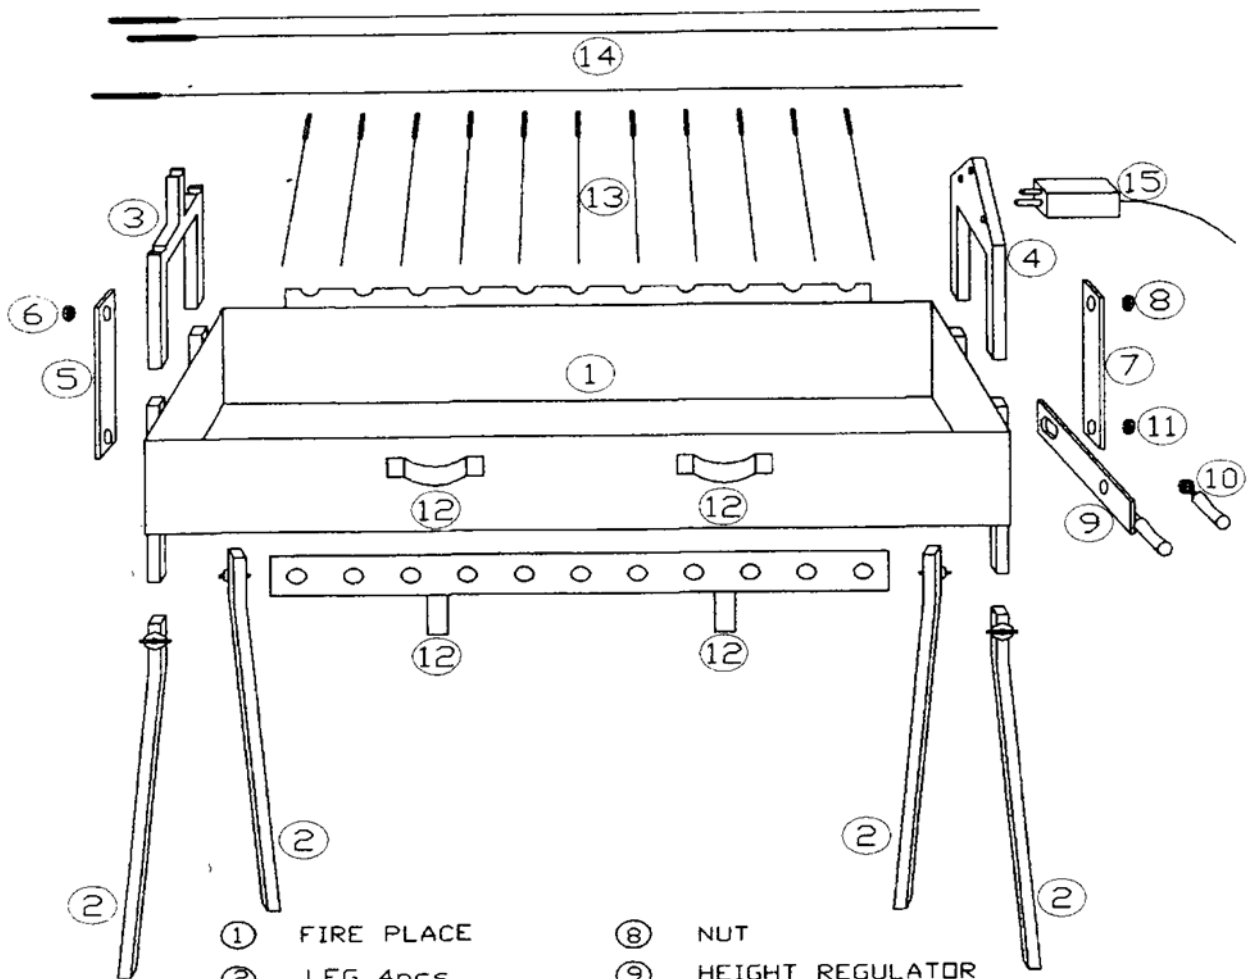

- | | | | |
|---|-------------|---|----------------------------|
| ① | FIRE PLACE | ⑧ | NUT |
| ② | LEG 4pcs | ⑨ | HEIGHT REGULATOR |
| ③ | T-STAND | ⑩ | HEIGHT REGULATOR TENSIONER |
| ④ | SKEWER GEAR | ⑪ | NUT |
| ⑤ | IRON PLATE | ⑫ | KEBAB GEAR |
| ⑥ | NUT | ⑬ | KEBAB STICK 11pcs |
| ⑦ | IRON PLATE | ⑭ | SKEWER STICK 3pcs |
| | | ⑮ | MOTOR |

IMPORTANT SAFEGUARDS:

When using the **Cyprus Grill** or any of its **electrical accessories**, basic safety precautions should always be followed including:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or levers instead.
3. To protect against electrical shock do not immerse cords, plugs, or appliances in water or other liquids.
4. Close supervision is necessary when any Barbecue is used near children.
5. Unplug accessories from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any electrical appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorised service facility for examination, repair, adjustment or replacement.
7. The use of accessory attachments that are not recommended by the Barbecue manufacturer may cause injuries.
8. Do not let electrical cords hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heater oven.
10. Extreme caution must be used when moving the Barbecue or accessories containing hot charcoal or other flammable material.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to the "off" position, then remove plug from wall outlet.
12. Do not use electrical appliances for other than intended use.
13. Save these Instructions.

This Barbecue and appliances are not intended for use by young children or frail persons without supervision. Young children should be supervised to ensure that they do not touch the Barbecue.

How to prepare the Cyprus Grill for cooking:

1. Place the **Cyprus Grill** in open air, away from materials that could light up from fire or heat.
2. Put in the **Cyprus Grill** enough quantity of charcoal to cook your meat.
3. Set fire to the charcoal pile by using Kindling or other materials that could easily burn.
4. Leave the pile for a while until the charcoal is well burnt and you don't have flames burning.
5. You are ready to put your meal on to be cooked.

Cleaning / Care Instructions:

1. If taken care of properly, your Cyprus Grill will provide you with many years of use.
2. After each use, allow your Cyprus Grill to cool down. Remember the deep dish will hold heat longer, so allow this to cool for longer after use.
3. Be careful not to touch or try to clean your Cyprus Grill until all parts have cooled down to room temperature.
4. To clean the outside of the Cyprus Grill use a damp cloth. You may like to wash or immerse your Cyprus Grill into water, however always ensure that no electrical appliance is attached otherwise this could cause you an electrical shock injury or harm and damage the motor. Always ensure the Cyprus Grill is dried thoroughly after cleaning to ensure long life.
5. Store indoors or undercover to prolong the life of your Cyprus Grill.
6. To clean the Stainless Steel Skewers, wash in warm water and use a mild dish washing liquid. For stubborn stains allow them to stand in water. Caution - Water saturation will damage the wooden handles.

By following these simple points of care, your Cyprus Grill will provide you with many years of use.